myPDFmanuals

You can read the recommendations in the user guide, the technical guide or the installation guide for SONY CYBER-SHOT DSC-W150. You'll find the answers to all your questions on the SONY CYBER-SHOT DSC-W150 in the user manual (information, specifications, safety advice, size, accessories, etc.). Detailed instructions for use are in the User's Guide.

User manual SONY CYBER-SHOT DSC-W150
User guide SONY CYBER-SHOT DSC-W150
Operating instructions SONY CYBER-SHOT DSC-W150
Instructions for use SONY CYBER-SHOT DSC-W150
Instruction manual SONY CYBER-SHOT DSC-W150

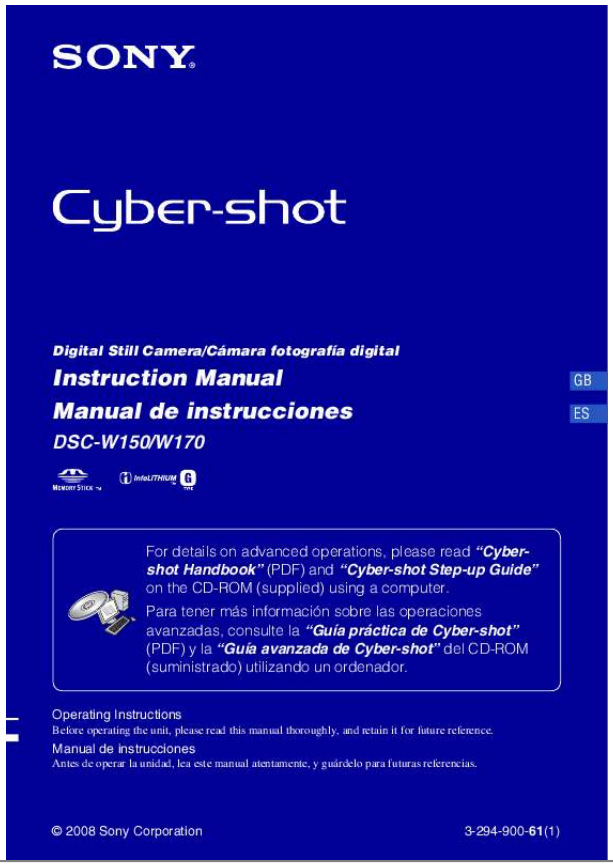
SONY
Cyber-shot
Digital Still Camera/Cámara fotografía digital
Instruction Manual
Manual de instrucciones
DSC-W150/W170
GB
ES
For details on advanced operations, please read "Cyber-shot Handbook" (PDF) and "Cyber-shot Step-up Guide" on the CD-ROM (supplied) using a computer.
Para tener más información sobre las operaciones avanzadas, consulte la "Guía práctica de Cyber-shot" (PDF) y la "Guía avanzada de Cyber-shot" del CD-ROM (suministrado) utilizando un ordenador.
Operating Instructions
Before operating the unit, please read this manual thoroughly, and retain it for future reference.
Manual de instrucciones
Antes de operar la unidad, lea este manual atentamente, y guárdelo para futuras referencias.
© 2008 Sony Corporation
3-294-900-61(1)

Your user manual
SONY CYBER-SHOT DSC-W150

Manual abstract:

Do not attempt to service the set yourself as opening or removing covers may expose you to dangerous voltage or other hazards. When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer that have the same characteristics as the original parts. Unauthorized substitutions may result in fire, electric shock, or other hazards. Upon completion of any service or repairs to the set, ask the service technician to perform routine safety checks (as specified by the manufacturer) to determine that the set is in safe operating condition. For added protection for this set during a lightning storm, or when it is left unattended and unused for Otherwise, fire or injury may result. Do not expose the batteries to excessive heat such as sunshine, fire or the like. If you have any questions about this product, you may call: Sony Customer Information Center 1-800-222-SONY (7669) The number below is for the FCC related matters only. You can help preserve our environment by returning your used rechargeable batteries to the collection and recycling location nearest you. For more information regarding recycling of rechargeable batteries, call toll free 1-800-822-8837, or visit http://www. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation. This power unit is intended to be correctly orientated in a vertical or floor mount position. You are cautioned that any changes or modifications not expressly approved in this manual could void your authority to operate this equipment. This product has been tested and found compliant with the limits set out in the EMC Directive for using connection cables shorter than 3 meters (9. This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Â Reorient or relocate the receiving antenna. â Increase the separation between the equipment and receiver.

Â Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. â Consult the dealer or an experienced radio/TV technician for help. The supplied interface cable must be used with the equipment in order to comply with the limits for a digital device pursuant to Subpart B of Part 15 of FCC Rules. The electromagnetic fields at the specific frequencies may influence the picture and sound of this unit. [Disposal of Old Electrical & Electronic Equipment (Applicable in the European Union and other European countries with separate collection systems) This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. the recycling of materials will help to conserve natural resources..

Your user manual
SONY CYBER-SHOT DSC-W150